


Does your door rattle? Is the body door catch loose and wobbly?

A simple fix is to remove the body catch by its 4 screws. Then separate the "toggle" from the base.

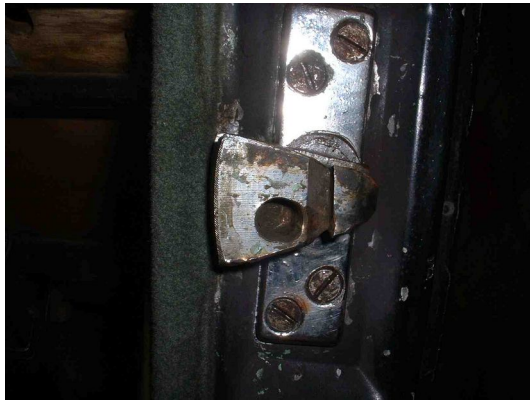

Remove the old silent block by using a bolt puller and continue turning until it becomes free. Then with a small screw driver remove the rubber "sleeve". Clean all faces. Use a piece of plastic tubing the diameter of the sleeve with the aid of liquid soap, gently force tube and sleeve into base plate.



When home, trim off surplus plastic, and re-assemble. On refitting, closing is firm and locks home, I wonder why it took me so long to do.

